
# **Roller Latch Installation Instructions**


# Step 1.

- Locate the correct position of the roller latch ensuring it avoids interfering with all other hardware.
- · Mark two hole centrelines at 20mm apart.
- Drill 2 x 16mm holes to 55mm deep.
- · Keep the drill straight and level when drilling the holes.

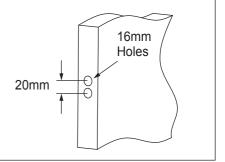


# Step 2.

Chisel out the timber between the two holes to make a 55mm deep slot.

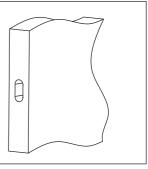

# Step 3.

- Mark out the 76 x 22 x 4mm deep face plate details (or use the latch face plate as a template).
- Chisel out the timber to 4mm deep to suit the roller latch face plates.
- Mark out two screw holes at 60mm centres and predrill with a 3.0mm drill.

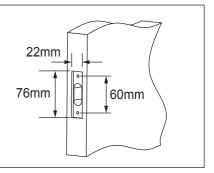




Gainsborough Hardware Industries Limited, Melbourne, Australia. A.B.N. 25 004 792 269 www.gainsboroughhardware.com.au



# **Roller Latch Installation Instructions**


# Step 4.

· Install the roller latch with the face plate and fix it in place with the 2 screws using a hand screwdriver.

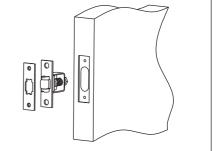


#### Step 5.

- · Close the door partially and determine the correct location for the strike plate on the door jamb.
- · Use the strike plate as a template to mark out the position on the door jamb.
- · Chisel out the timber to suit.
- · Mark out two screw holes at 60mm centres and predrill with a 3.0mm drill.
- · Install the strike plate and optional plastic strike box and fix it in place with the 2 screws using a hand screwdriver.

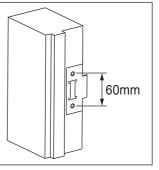

# Step 6.

- · Open and close the door to test the tension of the rollerlatch.
- · To adjust the tension, remove the roller latch, loosen the lock nut and adjust the tensioning screw in or out to suit, then tighten the lock nut.
- · Re-install the roller latch and check the tension.

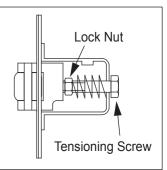



Gainsborough Hardware Industries Limited, Melbourne, Australia. A.B.N. 25 004 792 269 www.gainsboroughhardware.com.au