


# Installation template for Gainsborough Trilock Eclipse Dummy

Suits 35mm to 45mm door thicknesses

**GAINSBOROUGH**  
designer collection



3 IN 1 FUNCTION  
**TRILOCK**  
DEADBOLT | LOCKSET | PASSAGE SET  
ECLIPSE SERIES

## TRILOCK DUMMY FITTING INSTRUCTIONS

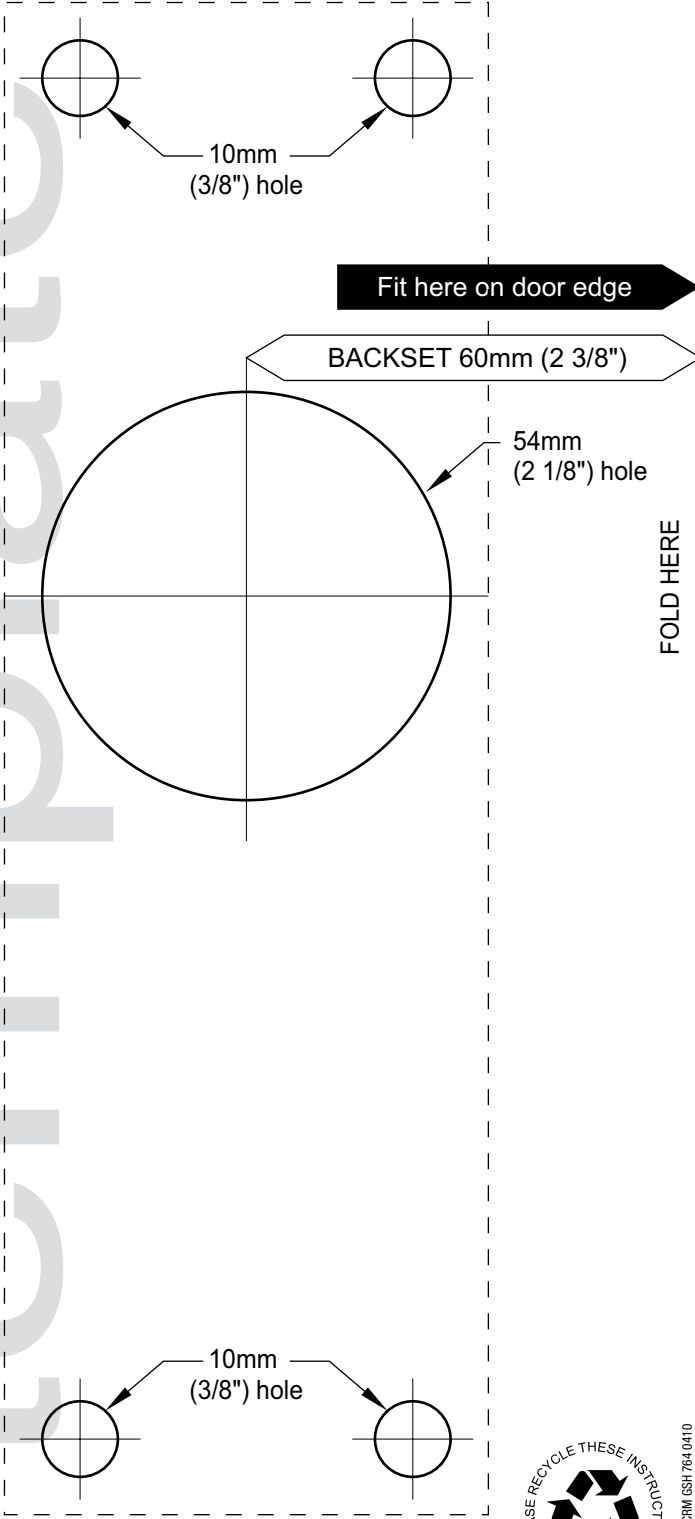

FOLD HERE

- Fold template where indicated.
- Position template on door edge at desired height. (Generally to line up with operating Trilock on opposite door)
- Firmly hold template to door and mark the four hole centres as indicated.
- Prepare and drill holes. Firstly, start with the 4 x 10mm holes (suggest to drill pilot holes first at 3mm, 1/8") then enlarge to the correct size of 10mm, 3/8". It is also recommended that you drill from both sides of the door.
- Prepare and drill the large 54mm hole. Once again start with pilot hole for lock body (suggested size 3mm, 1/8"). Then enlarge hole to 54mm (2 1/8"), drilling from both sides of the door.
- To rehand internal lever & set lever operation, hold Trilock faceplate up to door to check lever orientation, insert flat blade screwdriver under handing-plate and twist. Rotate lever 180° toward bottom of faceplate, as shown, until it clicks into place.
- To rehand external lever & set lever operation, undo and remove screws 1a and

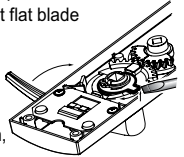

1b as shown in the diagram below. Rotate the lever left or right (depending on lever location requirement) 90 degrees.

Align screws 1a and 1b up to the screw posts. Refit and tighten screws 1a and 1b. **Important note:** Once the lever has been rehand, double check and ensure that the screws are installed correctly and securely fastened.

- Install threaded posts to the outside faceplate.
- Insert dummy plug into the inside of the internal plate/escutcheon before affixing faceplates to door. (To help hold dummy plug in position, apply a strip of adhesive tape if required.)
- Mount the outside faceplate to door.
- Align the inside faceplate to door and fit mounting screws and tighten into threaded posts.



PAIT 130  
APR '10


ORIGINATION GRM 764 0410

3 IN 1 FUNCTION  
**TRILOCK**  
DEADBOLT | LOCKSET | PASSAGE SET  
ECLIPSE SERIES


**TRILOCK DUMMY  
FITTING  
INSTRUCTIONS**

- Fold template where indicated.
- Position template on door edge at desired height. (Generally to line up with operating Trilock on opposite door)
- Firmly hold template to door and mark the four hole centres as indicated.
- Prepare and drill holes. Firstly, start with the 4 x 10mm holes (suggest to drill pilot holes first at 3mm, 1/8") then enlarge to the correct size of 10mm, 3/8". It is also recommended that you drill from both sides of the door.
- Prepare and drill the large 54mm hole. Once again start with pilot hole for lock body (suggested size 3mm, 1/8"). Then enlarge hole to 54mm (2 1/8"), drilling from both sides of the door.

- To rehand internal lever & set lever operation, hold Trilock faceplate up to door to check lever orientation, insert flat blade screwdriver under handing-plate and twist. Rotate lever 180° toward bottom of faceplate, as shown, until it clicks into place.

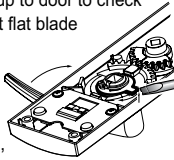

- To rehand external lever & set lever operation, undo and remove screws 1a and 1b as shown in the diagram below. Rotate the lever left or right (depending on lever location requirement) 90 degrees.

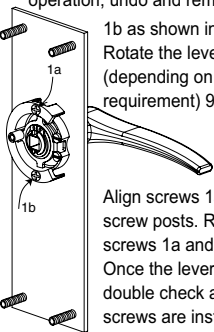

Align screws 1a and 1b up to the screw posts. Refit and tighten screws 1a and 1b. **Important note:** Once the lever has been rehandled, double check and ensure that the screws are installed correctly and securely fastened.


- Install threaded posts to the outside faceplate.
- Insert dummy plug into the inside of the internal plate/escutcheon before affixing faceplates to door. (To help hold dummy plug in position, apply a strip of adhesive tape if required.)
- Mount the outside faceplate to door.
- Align the inside faceplate to door and fit mounting screws and tighten into threaded posts.

Fit here on door edge

BACKSET 60mm (2 3/8")

54mm  
(2 1/8") hole

FOLD HERE

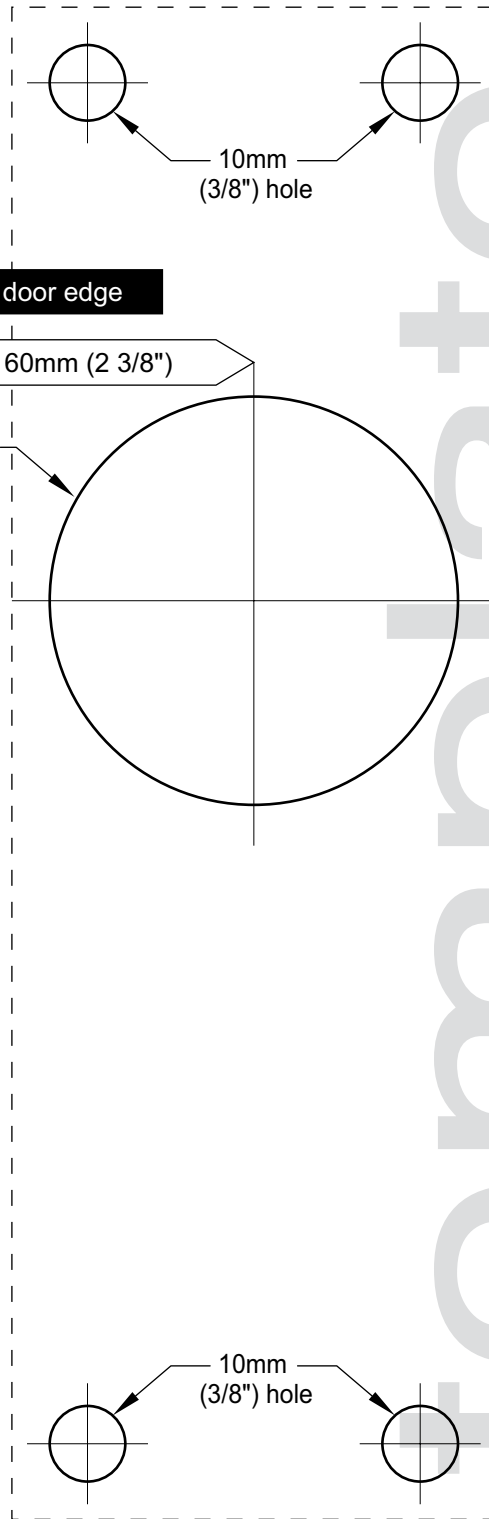

10mm  
(3/8") hole

10mm  
(3/8") hole

